

# Product Manual for Cisco IPTV Receivers

for use with your AT&T U-verse TV service

Supports Models ISB7000 and ISB7500





# **Contents**

Notice for Installers	4
IMPORTANT SAFETY INSTRUCTIONS	4
Change the Way You Watch TV	6
What's In the Carton?	6
Safety First	6
Identify Your Receiver with the Serial Number	6
In This Manual	6
Questions About Your Service.	6
Protecting You and the Environment	7
Front Panel	8
Back Panel	9
Connecting the Receiver	10
Connecting to the In-Home Network	11
Connections for a High-Definition TV (HDTV)	12
Connections for a Standard-Definition TV (SDTV)	13
Connections for a VCR or DVD Recorder	14
Connecting an Over-the-Air Converter Box	14
Connecting to an HDTV with an HDMI Connector	15
Connecting to an HDTV with a DVI Connector	16
Connecting to an HDTV with Component (YPbPr) Connectors	17
Connecting to an SDTV with Component (YPbPr) Connectors	18
Connecting to an SDTV with an S-Video Connector	19
Connecting to an SDTV with an RCA-Type Connector	20
Connecting to an SDTV with a Coaxial Cable	21
Connecting to a Home Theater System with Component (YPbPr) Connectors	22
Connecting to a Stereo VCR or DVD Recorder (optional)	23
Troubleshooting	24
Avoid Screen Burn-In	24
Frequently Asked Questions	25
Picture Formats	26
Index	27
Compliance Information	29

# **Notice for Installers**

The servicing instructions in this notice are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

#### Note to System Installer

For this apparatus, the cable shield/screen shall be grounded as close as practical to the point of entry of the cable into the building. For products sold in the US and Canada, this reminder is provided to call the system installer's attention to Article 800-93 and Article 800-100 of the NEC (or Canadian Electrical Code Part 1), which provides guidelines for proper grounding of the cable shield.



This symbol is intended to alert you that uninsulated voltage within this product may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this product.

Ce symbole a pour but d'alerter toute personne qu'un contact avec une pièce interne de ce produit, sous tension et non isolée, pourrait être suffisant pour provoquer un choc électrique. Il est donc dangereux d'être en contact avec toute pièce interne de ce produit.



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

#### WARNING TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



 
This symbol is intended to alert you of the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

Ce symbole a pour but de vous avertir qu'une documentation importante sur le fonctionnement et l'entretien accompagne ce produit.

20080814 Installer800

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as a power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

# **Power Source Warning**

A label on this product indicates the correct power source for this product. Operate this product only from an electrical outlet with the voltage and frequency indicated on the product label. If you are uncertain of the type of power supply to your home or business, consult your service provider or your local power company.

The AC inlet on the unit must remain accessible and operable at all times.

# **Ground the Product**

WARNING: Avoid electric shock and fire hazard! If this product connects to cable wiring, be sure the cable system is grounded (earthed). Grounding provides some protection against voltage surges and built-up static charges.

# **Protect the Product from Lightning**

In addition to disconnecting the AC power from the wall outlet, disconnect the signal inputs.

# Verify the Power Source from the On/Off Power Light

When the on/off power light is not illuminated, the apparatus may still be connected to the power source. The light may go out when the apparatus is turned off, regardless of whether it is still plugged into an AC power source.

# Eliminate Power/AC Mains Overloads

WARNING: Avoid electric shock and fire hazard! Do not overload Power/AC mains, outlets, extension cords, or integral convenience receptacles. For products that require battery power or other power sources to operate them, refer to the operating instructions for those products.

# **IMPORTANT SAFETY INSTRUCTIONS**, continued

# Provide Ventilation and Select a Location

- Remove all packaging material before applying power to the product.
- Do not place this apparatus on a bed, sofa, rug, or similar surface.
- · Do not place this apparatus on an unstable surface.
- Do not install this apparatus in an enclosure, such as a bookcase or rack, unless the installation provides proper ventilation
- Do not place entertainment devices (such as VCRs or DVDs), lamps, books, vases with liquids, or other objects on top of this product.
- · Do not block ventilation openings.

# Operating Environment

This product is designed for operation indoors with a temperature range from 32° to  $104^{\circ}$  F (0° to  $40^{\circ}$  C). Each product should have adequate spacing on all sides so that the cooling air vents on the chassis are not blocked.

# Protect from Exposure to Moisture and Foreign Objects

WARNING: Avoid electric shock and fire hazard! Do not expose this product to dripping or splashing liquids, rain, or moisture. Objects filled with liquids, such as vases, should not be placed on this apparatus.

WARNING: Avoid electric shock and fire hazard!
Unplug this product before cleaning. Do not use a liquid cleaner or an aerosol cleaner. Do not use a magnetic/static cleaning device (dust remover) to clean this product.

WARNING: Avoid electric shock and fire hazard! Never push objects through the openings in this product. Foreign objects can cause electrical shorts that can result in electric shock or fire.

# **Service Warnings**

WARNING: Avoid electric shock! Do not open the cover of this product. Opening or removing the cover may expose you to dangerous voltages. If you open the cover, your warranty will be void. This product contains no user-serviceable parts.

# **Check Product Safety**

Upon completion of any service or repairs to this product, the service technician must perform safety checks to determine that this product is in proper operating condition.

# **Protect the Product When Moving It**

Always disconnect the power source when moving the apparatus or connecting or disconnecting cables.

20110316\_\_IP\_NoTuner\_Safety

# Change the Way You Watch TV

Welcome to U-verse TV. The ISB7000 and ISB7500 devices, known as U-verse receivers, bring a rich, new set of interactive services directly to you through your TV and your in-home IP network. The receiver uses the existing in-home coaxial cable wiring and connects to most entertainment devices.

With Total Home DVR service, you can:

- · Record up to four shows at once on a single DVR
- · Record and play back your shows in any room from a single DVR
- · Pause, fast-forward, and rewind recorded shows on any TV from a single DVR
- · Pause your recorded show in one room and pick it up in another
- · Play the same recorded show on different TVs at the same time and control them separately
- Store up to 233 hours of SD or 65 hours of HD content with our larger-capacity DVR-included with AT&T U-verse TV U300 and U450 packages
- Program your DVR remotely from your computer or wireless phone

**Note**: Contact your service provider to find out if these services are available and to activate the services.

# What's In the Carton?

In addition to this product manual, the receiver carton contains the following items:

 An ISB7500 Receiver - TV receiver with a 500 GB hard drive that supports high-definition (HD) and standard-definition (SD) video decoding. Supports 480i, 720p, 1080i, and 1080p content. Uses Ethernet over CAT-5 or HPNAv3 in-home networking over coaxial or twisted-pair

OR

An ISB7000 Receiver - The ISB7000 is the same as the ISB7500 but without a 500 GB hard disk drive

A power cord and power adapter

# **Safety First**

Before using the receiver, read the Important Safety Instructions section of this manual.

# **Identify Your Receiver with the Serial Number**

At times your service provider may ask for the serial number. To find the serial number for your receiver, look on the bottom of the receiver for the label. The serial number is a 9-digit numeric code to the right of the letters "S/N" on the label.

Use the space provided here to record the serial number: \_\_\_\_\_\_

# In This Manual

This manual covers the information you need to connect your receiver to both your in-home IP network and your entertainment system. The manual also outlines certain safeguards and installation information. The safety information contained in this manual was developed and provided solely by the receiver manufacturer, Cisco Systems, Inc.


# **Questions About Your Service**

For questions about how to operate your receiver, once installed, refer to your *Feature Guide* available for download at: **att.com/userguides**. For all other questions about your TV service, contact your service provider.

# **Protecting You and the Environment**

Cisco addresses the environmental impact of networking products throughout their lifecycle, from product development, manufacturing, and use to service and end-of-life. Integrating environmental policies into Cisco engineering and manufacturing practices results in socially accountable business practices that help reduce the environmental impact associated with networking products.

# **Front Panel**

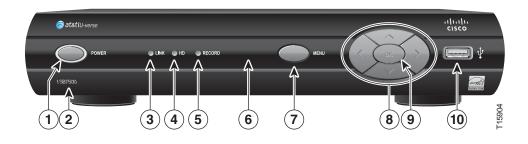

**1 Power**Turns the receiver on or places it in standby. To restart the receiver, press and hold the POWER button for 10 seconds. The LED is green

2 Model Number Identifies the model number of your receiver as ISB7000 or ISB7500

3 Link Indicates network link status. The LED is green

**4 HD** Indicates the set-top is set to a resolution of 720p, 1080i, or 1080p.

The LED is blue

**5 Record** Indicates that a recording is in progress. The LED is red

**6 IR Sensor** Receives the infrared signal from the remote control. The sensor is

behind the front panel

7 Menu Accesses the on-screen menu

8 Arrow Keys Accesses on-screen services (such as the on-screen guide, video-on-

demand, or pay-per-view) and navigates menus

**9 OK** Selects the current item

**10 USB Port** USB connector. (Reserved for future use)

Note: This illustration may vary from the actual product.




# CAUTION:

Your receiver may be equipped with a hard disk drive to store programs that you record and to allow you to rewind and pause live TV. Any time the receiver is powered on (power LED is illuminated) or a recording is in progress (the record LED is illuminated) the hard disk drive is in use.

If you need to move the receiver, complete the following steps to allow the hard disk drive to shut down properly. First, make sure that no recording is in progress (record LED is off). Then, turn off power by pressing the Power key. Finally, unplug the unit and wait 10 seconds for the hard disk drive to spin down (stop). At this point the unit can be moved safely.

You should handle this product with the same level of care you would use when handling other electronics containing a hard disk drive, such as a laptop computer or other hard disk drive-equipped devices.

# **Back Panel**

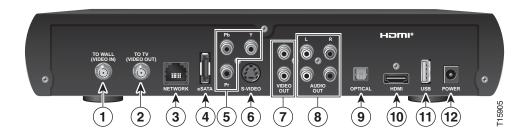

1 To Wall (Video In) Connect the receiver to in-house coaxial wiring, if applicable

2 To TV (Video Out) Connect to TV. You must set the channel on your TV to the channel designated by your service provider (usually channel 3). Contact your

service provider for the channel information

3 Network Connect to the Ethernet (CAT-5) network at your home, if applicable

**eSATA Port** eSATA connector. DVR unit only (Reserved for future use)

5 YPbPr Connect the receiver to the component video input (YPbPr) on the

HDTV. **See pages 12 and 13** for more information

6 S-Video Connect an S-Video cable to send an S-Video signal to your TV, VCR, or

DVD recorder. This signal is standard-definition but higher quality than

other standard-definition TV connections. **See page 13** for more information

mormation

**7 Video Out** Connect to composite input on your HDTV or SDTV

**Note:** Two video output connectors are provided. Typically, one output is connected to the TV, and the other output is used to connect to a

home theater system, DVD recorder, or VCR

8 Audio Out (L/R) Connect RCA-type cables to Audio Out to send analog audio signals

(left and right) to a TV with stereo inputs or to a stereo amplifier **Note:** Two sets of audio out connectors are provided. Typically, one set of outputs is connected to the TV, and the other set is used to

connect to a home theater system, DVD recorder, or VCR

9 Optical Connect an optical cable to send a digital audio signal to a surround-

sound receiver or other digital audio device

**10 HDMI** Connect an HDTV HDMI™ (High-Definition Multimedia Interface) cable

from the HDTV to the HDMI port. HDMI supports both digital audio and

video. **See page 12** for more information

**11 USB Port** USB connector. (Reserved for future use)

**12 Power** Connect the DC output of the AC power adapter (provided) to deliver

power to the receiver

**Note:** This illustration may vary from the actual product.

# **Connecting the Receiver**

To connect your receiver to your network and home entertainment devices, complete these steps.



Because the connections for a high-definition (HD) or standard-definition (SD) TV are different, you must determine if your TV is HD or SD. Your TV must receive HD signals for you to enjoy the benefits





of HDTV. Refer to the manual that came with your TV for more information. **See page 26** for more information on picture formats.



Make one of the following connections for your home network:

- If your home network uses coaxial cable, use the TO WALL connector on the receiver. See page 11.
- If your home network uses twisted pair cable (phoneline wiring), use the TO WALL connector on the receiver and an adapter that converts twisted pair to coaxial. See page 11.
- If your home network uses Ethernet (CAT-5) cable, use the NETWORK connector on the receiver. See page 11.



Make the connections for your TV, VCR, and DVD recorder as follows:

- If you are using an HDTV, see page 12 and the connection diagrams in this
  manual.
- If you are using a standard-definition TV, see page 13 and the connection diagrams in this manual.
- If you want to record some programs on VCR tape or DVD, see page 14 and the connection diagrams in this manual.



Identify the additional consumer electronic devices you will connect to the receiver and TV. **See pages 15 through 23** and refer to the owner's manual for the device.






Plug the receiver and the TV into an AC power source that is not controlled by a switch. For further instructions on completing your setup, refer to the *Feature Guide* available from your service provider.

# **Connecting to the In-Home Network**

The following diagrams illustrate examples of the connections you can use to connect your receiver to your in-home network. Contact your service provider for the recommended connection method for your home.

#### Notes:

- The in-home coaxial and phoneline wiring networks use HomePNA 3.1 technology.
- The illustrations below may vary from the actual product.

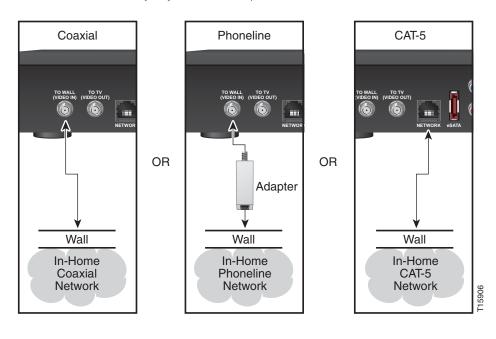

# **Connections for a High-Definition TV (HDTV)**

To use the receiver with an HDTV, you must make *one* of the following connections to view the HD content. Refer to the owner's manual for your TV and the cabling diagrams in this manual for more detailed connection information.

Although all connections provide you with quality service, we list the connections in our recommended order.

### Notes:

- The labeling on your receiver or HDTV may vary slightly from the illustrations shown below.
- · Some cables shown in the connection diagrams may not be included with this receiver.
- Set the HD mode and select the output video format (480i, 720p, 1080i, or 1080p) on the receiver using the instructions provided in the *Feature Guide* available for download at: uverse.att.com/support

Us	se One of These Required Connections	Receiver		HDTV
	to an HDTV	Connections		Connections
HDMI	Some HDTVs have a High-Definition Multimedia Interface (HDMI) connector. The HDMI connector provides both a digital video and audio connection. See the connection diagram on <b>page 15</b> for an example.  Note: The HDMI port on the TV must support	HDMI	Audio/Video	HDMI
	high-bandwidth digital content protection (HDCP).		1	
	The HDMI connector can provide the connection to an HDTV with a DVI input. If your HDTV has a Digital Visual Interface (DVI) connector, you need an HDMI-to-DVI adapter, and a separate audio connection (either L/R or optical audio).	HDMI Adapter Needed	Video	DVI
DVI	Note: The DVI port on the TV must support high-bandwidth digital content protection (HDCP).	AUDIO OUT	Audio	l R
	See the connection diagram on <b>page 16</b> for an example.	OPTICAL	Αι	OPTICAL INPUT
YPbPr	The YPbPr (red, blue, and green) connectors provide high-definition component video signals to an HDTV, and a separate audio connection (either L/R or optical audio).	Pb Y	Video	Y Pb
	See the connection diagram on <b>page 17</b> for an example.	L R  AUDIO OUT	Audio	l R
		OPTICAL	Au	OPTICAL INPUT
RGB	Some HDTVs have only RGB or RGB-HV connectors. If you have one of these HDTVs, you need a Component-to-RGB adapter, and you need a separate audio connection.	Pb Y  Adapter Needed	Video	R G G H
		L R  AUDIO	Audio	l R

# **Connections for a Standard-Definition TV (SDTV)**

When using the receiver with an SDTV, you must make *one* of the following connections to view content. Some SDTVs may not have all these connections. Refer to the owner's manual for your TV and the cabling diagrams in this manual for more detailed information.

Although all connections provide you with quality service, we list the connections in our recommended order.

### Notes:

- The labeling on your receiver or SDTV may vary slightly from the illustrations shown below.
- · Some cables shown in the connection diagrams may not be included with this receiver.

Use One of These Required Connections to an SDTV		Receiver Connections		SDTV Connections
٦٢	The YPbPr (red, blue, and green) connectors can provide standard-definition component video signals to an SDTV. A separate audio connection is also needed.  See the connection diagram on page 18 for an	Pb Y	Video	Y  Pb  Pr
YPbPr	example.	L R AUDIO OUT	Audio	l R
90	The S-Video connection provides an optimal video connection to SDTVs. A separate audio connection is also needed.	S-VIDEO	Video	S-VIDEO IN
S-Video	See the connection diagram on <b>page 19</b> for an example.	L R AUDIO OUT	Audio	l R
Video Out	The Video Out connector provides a video connection to an SDTV. A separate audio connection is also needed.  See the connection diagram on <b>page 20</b> for an example.	VIDEO OUT	Video	VIDEO IN
		L R AUDIO OUT	Audio	l R
To TV (Video Out)	The To TV (Video Out) connector provides both a video and audio connection to an SDTV.  See the connection diagram on <b>page 21</b> for an example.	TO TV (VIDEO OUT)	Audio/Video	CABLE IN/ ANT IN

# Connections for a VCR or DVD Recorder

When using the receiver with a VCR or DVD recorder, you must make *one* of the following connections to view content.

Although all connections provide you with quality service, we list the connections in our recommended order.

#### Notes:

- The labeling on your receiver, VCR, or DVD recorder may vary slightly from the illustrations shown below.
- · Some cables shown in the connection diagrams may not be included with this receiver.

Use One of These Optional Connections to a VCR or DVD Recorder		Receiver Connections		VCR/DVD Recorder Connections
	For VCRs or DVD recorders with S-Video In and Left and Right audio connectors, use the S-Video and the Audio Out Left and Right connectors on the receiver.	s-video	Video	S-VIDEO IN
Recorder		L R  AUDIO OUT	Audio	l R
VCR/DVD Re	For VCRs or DVD recorders with Video In and Left and Right audio connectors, use the Video Out and the Audio Out connectors (Left and Right) on the receiver.	VIDEO OUT	Video	VIDEO IN
	See the connection diagram on <b>page 23</b> for an example.	L R  AUDIO OUT	Audio	

# **Connecting an Over-the-Air Converter Box**

You can connect an over-the-air converter box directly to your TV to receive certain local channels, but do not connect the over-the-air converter box directly to your receiver.

# **Connecting to an HDTV with an HDMI Connector**

# **Cable Used in this Configuration**


· 1 HDMI Cable

## Notes:

- The HDMI port on the TV must support high-bandwidth digital content protection (HDCP).
- The HDMI interface supports Dolby™ Digital 5.1 audio.



# **WARNING:**

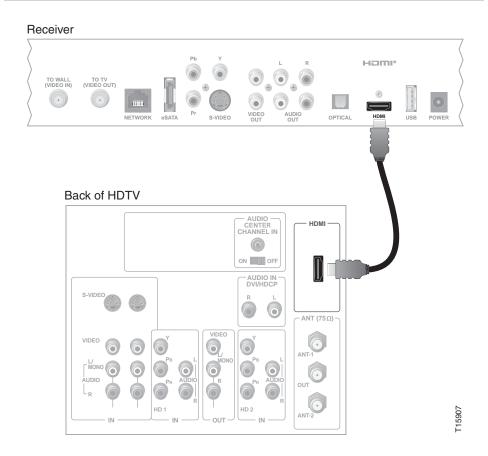

# Connecting to an HDTV with a DVI Connector

# **Cables Used in this Configuration**

- 1 HDMI-to-DVI Cable or 1 HDMI Cable and 1 HDMI-to-DVI Adapter
- 1 Audio Left/Right Cable (You can also use an optical cable [indicated by the dotted line] instead of the Audio Left/Right Cable as shown in the diagram, dependent upon your TV's capabilities.)

#### Notes:


- · The DVI port on the TV must support high-bandwidth digital content protection (HDCP).
- When you connect the HDMl connector to the DVl connector on your HDTV, you need an HDMl-to-DVl adapter and a separate audio connection.



# WARNING:

Electric shock hazard! Unplug all electronic devices before connecting or disconnecting any device cables to the receiver.

# Receiver

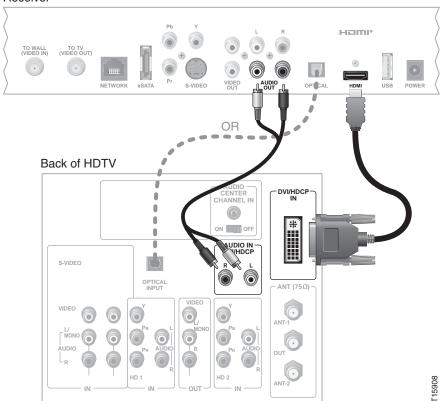


# Connecting to an HDTV with Component (YPbPr) Connectors

# **Cables Used in this Configuration**

- 1 Component Video Cable (YPbPr)
- 1 Audio Left/Right Cable (You can also use an optical cable [indicated by the dotted line] instead
  of the Audio Left/Right Cable as shown in the diagram, dependent upon your TV's capabilities.)



# **WARNING:**

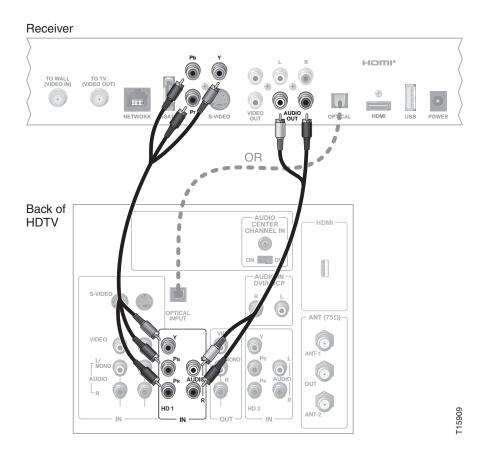

# Connecting to an SDTV with Component (YPbPr) Connectors


# **Cables Used in this Configuration**

- 1 Component Video Cable (YPbPr)
- · 1 Audio Left/Right Cable

**Note**: The receiver must be set to the proper standard-definition mode.



# WARNING:

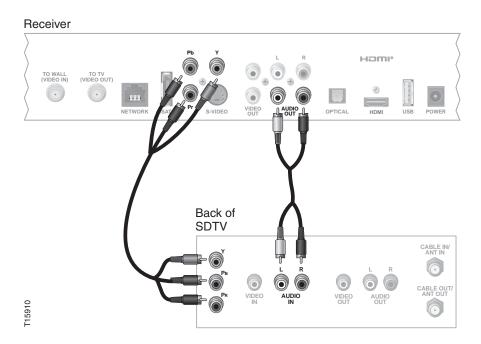


# **Connecting to an SDTV with an S-Video Connector**

# **Cables Used in this Configuration**

- · 1 S-Video Cable
- · 1 Audio Left/Right Cable



# WARNING:

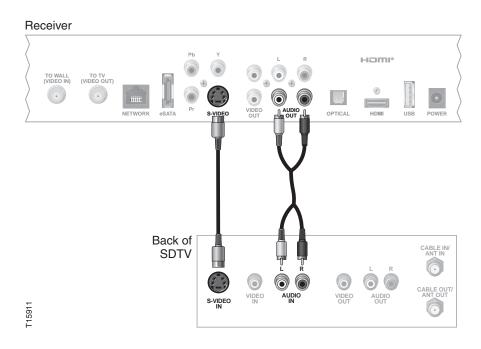


# Connecting to an SDTV with an RCA-Type Connector

# **Cables Used in this Configuration**

- · 1 RCA-type Video Cable
- · 1 Audio Left/Right Cable



# **WARNING:**

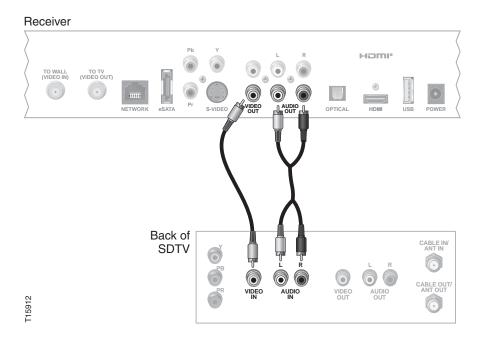

# **Connecting to an SDTV with a Coaxial Cable**


# **Cable Used in this Configuration**

1 Coaxial Cable

**Note**: You must set the channel on your TV to the channel designated by your service provider (usually channel 3). Contact your service provider for the channel information.



# **WARNING:**

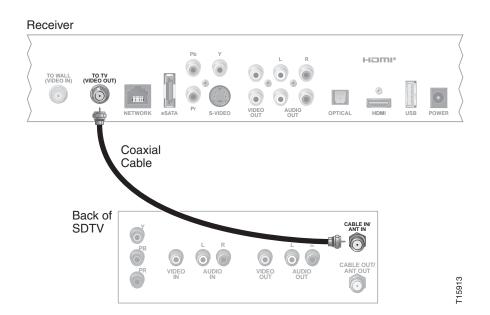

# Connecting to a Home Theater System with Component (YPbPr) Connectors

# **Cables Used in this Configuration**

- 1 Component Video Cable (YPbPr)
- 1 Audio Left/Right Cable (You can also use an optical cable [indicated by the dotted line] instead
  of the Audio Left/Right Cable as shown in the diagram.)

#### Notes:

- This connection requires that audio is provided by the home theater system.
- Consult the user guide that came with your home theater system for information on connecting your other video and audio devices.

Contact AT&T ConnecTech® service to learn about affordable flat-rate home theater installation services. Call **(800) 344-1734** to speak with an AT&T ConnecTech Representative. (Not available in all areas; See offers and terms & conditions at **www.att.com/ConnecTech**).



# **WARNING:**

Electric shock hazard! Unplug all electronic devices before connecting or disconnecting any device cables to the receiver.

# Receiver TO WALL (VIDEO IN) (VIDEO OUT) NETWORK PP S-VIDEO VIDEO OUT AUDIO OUT AUDI

# Connecting to a Stereo VCR or DVD Recorder (optional)

The diagram below shows how to connect a recording device to your receiver. Although it is possible to watch TV using a connection through your VCR or DVD recorder to the TV, this connection may not provide the best picture, and HDTV users are restricted to an SD format. In addition, some content is copy protected and passing this content through the recording device may result in a picture that cannot be viewed.

For these reasons, the connection shown is best used to provide only video and audio to your recording device and not for normal TV viewing. The connection from the recording device to the TV (only used for playback of recorded material) depends on the type of device being used, the outputs that are supported, and the inputs that remain available for use on your TV.

Consult the owner's manuals provided with your TV and recording device for more details on connection options.

# **Cables Used in this Configuration**


- 1 RCA-type Video Cable
- 1 Set Audio Left/Right Cables



# WARNING:

Electric shock hazard! Unplug all electronic devices before connecting or disconnecting any device cables to the receiver.

Connecting your TV directly to the Audio/Video output of your receiver will assure a more vivid picture and enhance your viewing enjoyment.

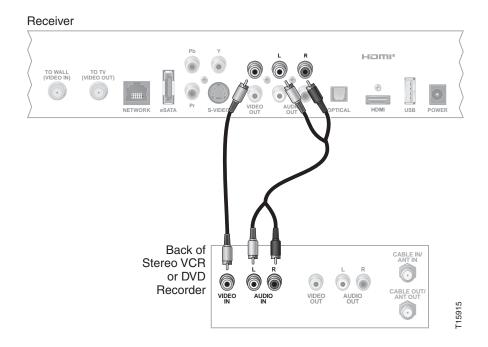

# **Troubleshooting**

If the receiver does not perform as expected, the following tips may help. If you need further assistance, contact your service provider.

# **No Picture**

- · Verify that the power to your TV is turned on.
- If the receiver is plugged into a wall switch, verify that the switch is in the ON position.
- Verify that all cables are properly connected.
- If your system includes a VCR, DVD recorder, or stereo, verify that you have properly connected the device to the receiver.
- Verify that you are using the proper input selection to the home theater receiver or TV.
- Verify that the receiver is set to the proper screen type and resolution.
- If you are using coaxial cable to connect to your TV, verify that the TV is tuned to the channel designated by your service provider (usually channel 3). Contact your service provider for the channel information.

# No Color or Incorrect Color

- Verify that the current TV program is broadcast in color.
- Adjust the TV color controls.
- If you are using a component video connection (YPbPr), check that all connectors are completely
  and properly plugged into the receiver and TV.
- If you are using a component video connection (YPbPr) and your HDTV has only RGB or RGB-HV
  connectors, you must use an adapter. You can obtain the adapter through an electronic parts
  retailer.

# No Sound

- If your setup includes a VCR, DVD recorder, or stereo, verify that you have properly connected the device to the receiver.
- Verify that the volume is turned up.
- · Verify that the mute function is not on.
- · Verify the proper input selection to the home theater receiver or TV.
- · If you are using coaxial cable to connect to your TV, verify that the TV is tuned to the correct channel.

# **Avoid Screen Burn-In**

Images such as letterbox bars or side bars, bright closed-captioning backgrounds, station logos, or any other stationary images may cause the display in your HDTV to age unevenly; this is known as screen burn-in. Refer to the owner's manual that came with your HDTV for more information.



Avoid screen burn-in.

Do not display the same fixed images on your HDTV screen for extended periods of time.

# **Frequently Asked Questions**

# What Is Digital Television?

Digital television (DTV) is a huge leap forward in television technology compared to analog television that has been widely available since the 1940s. DTV is delivered and displayed using digital encoding, similar to the way a PC operates. By using digital technology, there is no variation in picture and sound quality from the origination point until it is displayed on your television. You always receive a high-quality picture without the wavy lines or static you might sometimes get from a weak analog signal. Another feature of digital television is digital surround sound using Dolby Digital technology, which is the same technology used to produce the sound you hear in movie theaters.

# What Is Standard-Definition Television?

Standard-definition television (SDTV) is basic digital television programming delivered by your service provider. Typically, the SDTV screen is the same, nearly square shape as an analog television screen. Digital images on an SDTV set are crisp and clear–noticeably better than on a standard analog television set using an antenna to receive over-the-air signals.

# What Is High-Definition Television?

High-definition television (HDTV) is a completely new way to send and receive television broadcast signals. HDTV images are made up of pixels that are much smaller and closer together than those used in standard analog television, and there are millions of them. Thus, HDTV can display five to six times the detail of analog television to deliver picture quality that is much more realistic, dimensional, and precise. SDTV programs can be viewed on an HDTV.

# Are Local TV Stations or Other Programmers Broadcasting in HDTV?

Many local TV stations and programmers are transmitting digital signals. However, transmitting a digital signal does not mean transmitting an HDTV signal. Some stations are using the new bandwidth to broadcast several standard-definition channels. Most stations and programmers, once they begin broadcasting in digital, are offering HD content from their parent network (for example, CBS, ABC, NBC, Fox, and PBS). Contact your service provider for more information.

# Why Aren't All the Shows I Watch in High-Definition?

A high-definition program must originate in HD format and be broadcast in HD format. Having an HDTV system does not mean that everything you watch will be viewed in high-definition. Getting the signal from a digital source also does not mean it is high-definition.

# Why Are Some HDTVs 4:3 Aspect Ratio and Others 16:9?

The aspect ratios differ because television manufacturers build both standard-screen and wide-screen HDTVs to appeal to consumer viewing preferences. The two aspect ratios are as follows:

- On standard-screen (4:3) HDTVs, the programming is displayed in letterbox format in the middle
  of the screen. There are bars surrounding the picture.
- On wide-screen (16:9) HDTVs, the programming is displayed on the full screen.

# What Is HDMI and Does it Support Dolby Digital 5.1 Audio?

The High-Definition Multimedia Interface (HDMI) is an uncompressed, all-digital audio/video interface. The Dolby Digital audio format that provides up to 5.1 separate channels of surround sound, and is the standard used for DVD-Video. HDMI supports standard, enhanced, or high-definition video, plus multi-channel digital audio, such as Dolby Digital audio, on a single cable.

# **Picture Formats**

# What Is the Difference Between a Standard-Screen and a Wide-Screen HDTV?

The type of screen your HDTV has (wide-screen or standard-screen) determines how the receiver displays programs on the screen. The picture format for an HDTV is a combination of *aspect ratio* and *screen resolution* and is different for standard-screen and wide-screen HDTVs.

# What Is Aspect Ratio?

An aspect ratio is the ratio of the width to the height of the TV screen. The aspect ratios differ because the television industry manufactures both standard-screen and wide-screen HDTVs to appeal to consumer viewing preferences.

# What Is the Screen Resolution?

The screen resolution indicates the amount of detail that the picture displays. Resolution is identified by the number of display lines on the screen. The techniques that an HDTV uses to "paint" the picture on the screen are referred to as progressive and interlaced.

With the **progressive scanning** method, the lines are drawn on the screen one at a time in sequential order. Progressive scanning results in a more detailed image on the screen and is also less susceptible to the flicker commonly associated with interlaced scanning. The **interlaced method** involves refreshing pixels in alternation – first the odd lines and then the even lines.

For advanced setup, select the screen resolution that your TV can support. Refer to your *Feature Guide* and HDTV owner's manuals to choose the proper screen resolution (480i, 720p, 1080i, or 1080p) for your setup.

For example, a screen resolution of 1080i indicates that the screen shows 1080 lines in an interlaced display, and 720p indicates that the screens shows 720 lines in a progressive display.

A **standard-screen HDTV** has a 4x3 aspect ratio. The screen is 4 units wide for every 3 units tall.



A screen resolution of 480i fills the screen.

A **wide-screen HDTV** is one-third wider than a standard-screen HDTV. The screen is 16 units wide for every 9 units tall.



A screen resolution of 720p, 1080i, or 1080p fills the screen.

# Index

A	Connection			
AC Power input 9	Coaxial Network 11			
Arrow keys 8	Consumer electronic devices 10			
Aspect ratio 26	Controls See Front panel			
Audio Out 9, 12, 13, 14	D			
В	DC Power output 9			
Back panel 9	Diagrams. See Connecting the receiver to other devices			
Burn-in of screen 24				
Buttons See Front Panel	Digital Video Recorder. See DVR Digital TV, What is it 25			
С	DVD Connection 9, 14, 23			
Cables 9, 10, 11, 15-23	DVI connector 12, 16			
CAT-5 See Ethernet	DVR 6			
Coaxial Cable Input 9, 10, 11, 21				
Coaxial network connection 11	E			
Compliance, FCC 29	Ethernet 9, 10, 11			
Component video connection. See YPbPr	eSATA port 9			
Connectors	F			
See also Front panel; Back panel	FAQs 25			
DVD recorder 14	FCC compliance 29			
required for HDTV 12	Formats, picture 26			
required for SDTV 13	Frequently Asked Questions. See FAQs			
VCR 14	Front panel 8			
Connecting the receiver to other devices	н			
DVD recorder 9, 14, 23	Hard disk drive, Caution 8			
HDTV with Component input (YPbPr) 17	HD			
HDTV with DVI connector 12, 16	format 25 HDTV broadcasting 25 HDTV, what is it 25 indicator 8			
HDTV with HDMI connector 12, 15				
Home Theater System with Component input (YPbPr) 22				
SDTV with Component input (YPbPr) 18	HDMI 9, 12, 15			
SDTV with an S-Video connector 19	High-definition See HD			
SDTV with an RCA-type connector 20	Home theater system connection 22			
SDTV with Coaxial cable 21	1			
VCR 9, 14, 23	Interlaced screen resolution 26			
	IR sensor 8			

# Index, continued

maex, continued				
Κ	Т			
Keys. See Front panel	To Wall (Video In) connector 9, 10, 11			
N	To TV (Video Out) connector 9, 13, 21			
Network 9, 10, 11	Troubleshooting 24			
	TV			
0	digital, what is it 25			
Optical Audio Output 9, 12, 16, 17, 22	formats 26			
Over-the-air converter box 14	HDTV, what is it 25			
P	programming 25			
Picture formats 26	recording 6			
Ports. See Connectors	resolution 26			
Power 8, 9	screen size. See aspect ratio			
Programs, view 25	standard-screen 26			
Progressive screen resolution 26	standard-definition 10, 13, 18, 19, 20, 21, 25			
R	wide-screen 26			
Record programs 6	U			
RGB connector 12, 24	USB port 8, 9			
S	•			
S-Video Out 9, 13, 14	V			
S-Video In 13, 14	VCR connection 9, 14, 23			
Safety 4, 5	Video In. See To Wall			
Scan rates. See screen resolution	Video Out. See To TV			
Screen	View programs 25			
burn-in 24	w			
resolution 26	Wide-screen TV 26			
size 26	Υ			
SD	• YPbPr			
Connections 10, 13, 18, 19, 20, 21	connector 9, 12, 13, 17, 18, 22			
TV, What is it 25	HDTV connection 12, 17			
Serial number, locating 6	home theater connection 22			
Sound, performance 24	SDTV connection 13, 18			
Standard-definition TV 10, 13, 18, 19, 20, 21, 25	SELV COMPECTION 13, 10			
Standard-screen TV 26				

# **Compliance Information**

# **United States FCC Compliance**

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against such interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service provider or an experienced radio/television technician for help.

Any changes or modifications not expressly approved by Cisco Systems, Inc., could void the user's authority to operate the equipment.

The information shown in the FCC Declaration of Conformity paragraph below is a requirement of the FCC and is intended to supply you with information regarding the FCC approval of this device. The phone numbers listed are for FCC-related questions only and not intended for questions regarding the connection or operation for this device. Please contact your service provider for any questions you may have regarding the operation or installation of this device.

# FC FCC Declaration of Conformity

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: 1) the device may not cause harmful interference, and 2) the device must accept any interference received, including interference that may cause undesired operation.

ISB7000 or ISB7500 Receiver Models ISB7000 or ISB7500 Manufactured by: Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134 USA www.cisco.com/go/contacts

# **Canada EMI Regulation**

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

20081121 FCC Standard

# **AVC VIDEO LICENSE**

With respect to each AVC/H.264 product, we are obligated to provide the following notice:

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

Accordingly, please be advised that service providers, content

providers, and broadcasters may be required to obtain a separate use license from MPEG LA prior to any use of AVC/H.264 encoders and/or decoders.

# **ENERGY STAR® Notice**

Cisco has tested and confirmed that the ISB7000 and the ISB7500 set-top models meet the Qualification Criteria specified in the ENERGY STAR Program Requirements for Set-top Boxes Version 3.0

# ROVI CORPORATION COPYRIGHT NOTICE

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

### **Disclaimer**

Cisco Systems, Inc. assumes no responsibility for errors or omissions that may appear in this manual. We reserve the right to change this manual at any time without notice.

Notes	
	_
	_
	_

Notes	

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

AT&T, the AT&T logo, ConnecTech and U-verse are registered trademarks or trademarks of AT&T Knowledge Ventures.

Manufactured under license from Dolby Laboratories. Dolby is a trademark of Dolby Laboratories. ENERGY STAR and the ENERGY STAR mark are registered trademarks of the U.S. government.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

HomePNA is a trademark of HomePNA Alliance.

Rovi is a trademark of Rovi Corporation.

© 2014 Cisco and/or its affiliates. All rights reserved.

Last Updated: May 2014 78-4031319-01F0

